

NECKLACE TUTORIAL « CANDY HEART »

Les créations d'Anna®



This Tutorial has been designed and is offert to you by « Les Créations d'Anna® »

You can find Les Créations d'Anna on the website :

<https://lescreationsdanna.com>

Les créations d'Anna

Materials for a 38 cm necklace




14 Candy / Heart
Curacao
(FP Sélection)



22 Super Duo (SD)
Pastel Aquamarine
02010/25019



10 Pearls
4mm (P4)
Cream
10 Pearls
3mm (P3) Cream

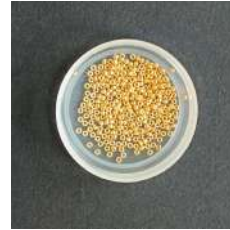

Sead Beads 15/0
(R15)
Sead Beads 11/0
(R11)
Sead Beads 8/0 (R8)



22 Fire Polish 8 mm
(F8)
Blue Zircon (60150)
Ou
Aquamarine
(60020)



30 Bicone 4 mm
(T4)
Blue Zircon (60150)
Ou
Aquamarine
(60020)



2 crimp beads (PE)
2 Brass Positioning
Bead (CPA)



2 rings
2 Brass Bead Tips
(CN)



1 Clap



Wire Fireline 0.12



1 Needle size 010




Cabled Wire



Crimper Tools
(PPE)

Element 4 (central element): You will make 1 element

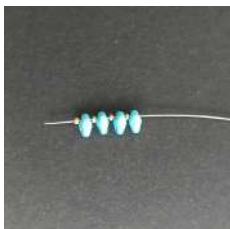

1) Alternately place
4 SDs and 4 R15s



2) Pass through all
the beads, make a
double knot and cut
off the end



3) Pass into the R15
and the SD



4) Pass into the top
hole of the SD



5) Place 1 R15, 1 P4,
1 R15 in the top
hole of all the SDs.



6) You are placed in the top hole of the SD



7) Pass into the R15 and the P4



8) Place in a loop 1 R15, 1SD, 1 R15, 1 SD, 1 R15



9) Pass into the R15, the SD, the R15




10) Pass into all the beads again. Place yourself in the R15



11) Place 3 R15s in the top hole of the SD



12) Pass into the R15

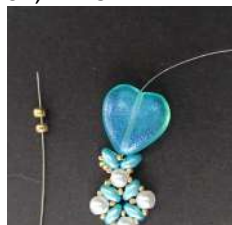

13) Place the heart and 2 R8s



14) Pass into the 2nd R8 and the heart



15) Pass into the R15. Pass into the heart, the 2 R8s, the 2nd R8, the heart and the R15.



16) Go through the top hole of the SD



17) Place 3 R15 in the next R15



18) Place 1 R15 in the next R15



19) Go through all the beads and come and place yourself in the P4



20) Place 9 R15 in a loop



21) Pass into the 8 R15s without passing through the central R15



22) Pass into P4 again. Place yourself in the 5th R15. Tighten your work!




23) Place the heart in this direction



24) Place 1 R15 in the heart



25) Pass through the R15 in a loop, pass through the heart, the R15, the heart, the R15 to consolidate.

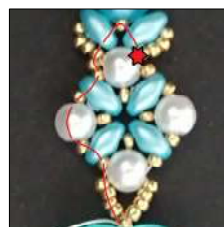

26) Pass through all the beads to consolidate and place yourself in the R15



27) Place 1 R15 and pass through the beads



28) Pass through all the following beads



29) Go around to consolidate



30) Tie a double knot and cut your thread. Your 4th element is finished!


Element 3: You will make 2 elements



31) Place 1 R15, 1 SD, 1 R15, 1 SD, 1 R15, 1 P4




32) Pass in Loop through all the beads

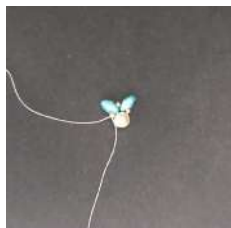


33) Tie a double knot and cut your thread



34) Pass in loop in the P4

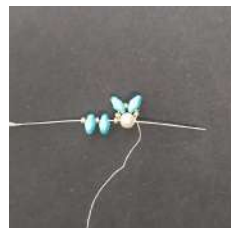

35) Place in loop 1 R15, 1 SD, 1 R15, 1 SD, 1 R15

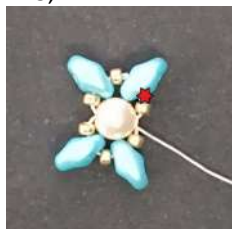

Place yourself in R15




37) Turn your element. Repeat steps 11 to 18 then come and place yourself here in the opposite SD



38) Place 3 R15 in the SD



39) Place 1 R15, 1 P4, 1 R15

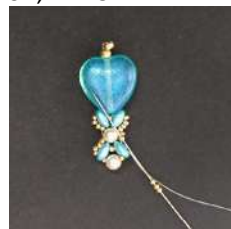

40) Place 3 R15 in the next R15



41) Pass in the next R15



42) Pass in the R15, the SD, the R15, the SD, the R15



43) Place 1 R15 in the next 4 R15



44) Pass in the SD, the R15 and the P4 Repeat step 20 to 25




45) Pass through the beads again, make a double knot and cut the thread. Your 3rd element is finished!

Element 2: You will make 2 elements



46) You will repeat steps 31 to 34

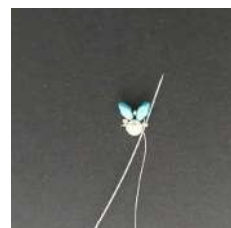

47) Move to the next R15. Repeat steps 11 to 17, and 23 to 25



48) Pass in all the beads, tie a double knot and cut the thread. Your 2nd element is complete!

Element 1: You will make 2 elements




49) Place 1 R15, SD, 1 R15, 1 SD, 1 R15, 1 P3




50) Repeat steps 31 to 34




51) Place in loop 5 R15s

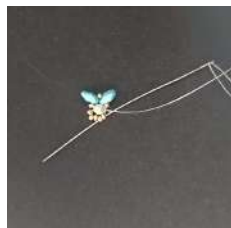

52) Pass in the 2 R15s

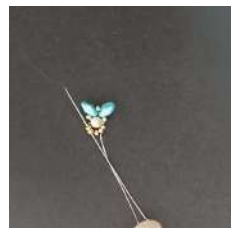

53) Pass through the 2 R15s without passing through the middle R15

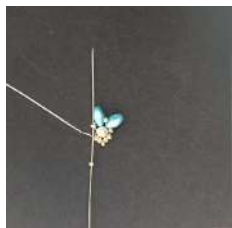

54) Place 1 R15 in the next R15. Repeat steps 11 to 18, and 18 to 25



55) You are placed here



56) Pass in the next 2 R15



57) Repeat steps 23 to 25



58) Pass through the beads again, make a double knot and cut the thread. Your 2nd element is complete!

Assembling the collar



Cut 46cm of cabled wire and place 1 PE, 1 CN, 1 R11




Pass in loop through the CN and PE




Tighten the wire, then tighten the CN with flat-nose pliers



Flatten the CN with the PPE

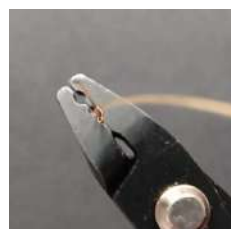

Crimp the PE in the second hole

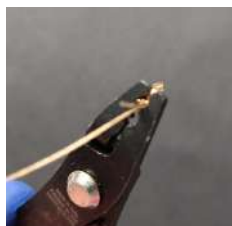

Fold the PE over itself



Place the CPA and tighten gently



Crimp with the PE (1st hole)



Place 1 ring and the clasp



Place 9 T4s and 8 F8s alternately in this order: 1 R11, 1 T4, 1 R11, 1 F8, 1 R11



Place the 1st element, 1 R11, 1 T4, 1 R11, F8, 1 R11, 1 T4, 1 R11

Place the 2nd element, 1 R11, 1 T4, 1 R11, F8, 1 R11, 1 T4, 1 R11

Place the 3rd element, 1 R11, 1 T4, 1 R11, F8, 1 R11, 1 T4, 1 R11

Place the 4th element, 1 R11, 1 T4, 1 R11, F8

Alternately place 9 T4s and 8 F8s in this order: 1 R11, 1 T4, 1 R11, 1 F8, 1 R11

Colour ideas

